RAGU Z720

User's Guide




Thank you for purchasing RAGU Z720. Please read this user's guide carefully before operating the projector, and save this guide for future use. If you have any further enquiries or need any further assistance, please contact Official Email: service@iragu.net

Call: 1-262-299-0397 (available for customers in the United States currently)

1. RAGU Z720 projector 2. Remote control 3. Power cord 4. 3-in-1 AV cable 5. Adjustable foot (already installed) 6. HDMI cable 7. VGA cable 8. Cleaning cloth **Projector Part Locations** Front/Top 1. Lens 2. Focus/Zoom ring 3. Keystone ring 4. Front adjustable foot 5. Control panel Left 1. SD card slot 1 Rear 1. 2 USB ports 2. HDMI port 3. VGA port 4. Audio jack 5. AV input port 6. AC input port


----- **5**

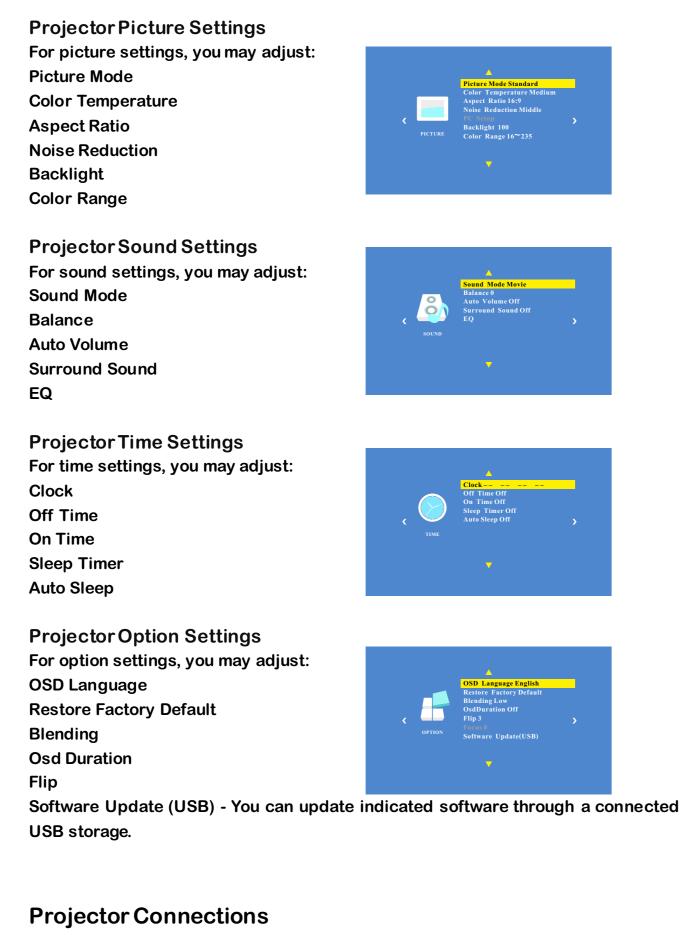


You can connect the projector to USB storage devices, an audio source, a SD card, an AV equipment, a VGA device or a HDMI device to enjoy your presentations, images, or other videos, with premium sound.

Contents

Imnortant Sa	afety Instructions	3
Warranty		
wairanty		4
Projector F		4
Product Box	Contents	4
Projector Pa	Int Locations	5
Front/Top		5
Left ·····		5
Rear · · · · ·		5
Base ·····		6
Control Pane	el ••••••••••••••••••••••••••••••••••••	6
Remote Con	trol	7
Setting Up	the Projector	9
	acement and Installation	
	istance and Screen Size	
Projector Ac	ljustment	1(
Basic Proi	ector Operations	1(
	ff the Projector	1(
Power On th		1(
	ne Projector	1(
	enu Settings	
· · · J · · · · · · · ·	cture Settings	
Projector Pie		•
•	bund Settings	-
Projector So	nund Settings ·····	1
Projector So Projector Til	me Settings ······	
Projector So Projector Tiu Projector Op	me Settings	1 [.]
Projector So Projector Tiu Projector Op Projector C	me Settings	1 [.] 1 [.]
Projector So Projector Til Projector Op Projector O Introduction	me Settings otion Settings Connections to Ports	1 ⁻ 1 ⁻ 1:
Projector So Projector Tin Projector Op Projector O Introduction Connecting	me Settings otion Settings Connections to Ports to a Storage Device	1 ⁻ 1 ⁻ 1 ⁻ 1 ⁻
Projector So Projector Tin Projector Op Projector C Introduction Connecting	me Settings otion Settings Connections to Ports	1 · 1 · 1 : 1 : 1 :

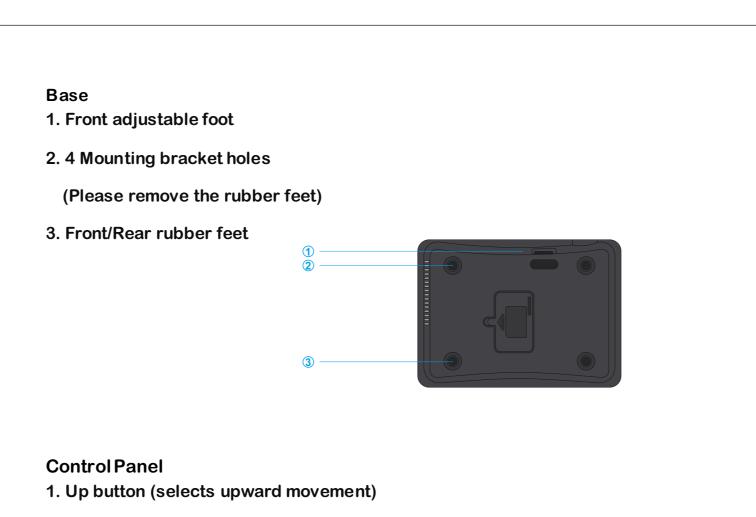

- 2. Source button (selects of the input source)
- 3. Right/Volume up button (selects rightward movement and adjusts speaker volume)
- Play/Pause button (plays/stops playing audio or video)
- 5. Down button (selects downward movement)
- 6. Menu button (accesses projector menu system)
- 7. Left/Volume down button (selects leftward movement and adjusts speaker volume)
- 8. Power button (turns the projector on or off)
- 9. Ok button (selects and confirms options)

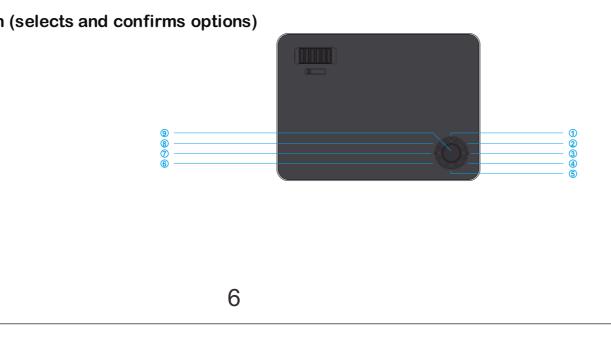

Introduction to Ports

content.

USB ports (connects to USB storage devices) SD card slot (connects to a SD card up to 32GB) AV input port (connects to an AV equipment) HDMI port (connects to a HDMI device) VGA port (connects to a VGA device)

Audio jack (connects to an audio device)

Connecting to a Storage Device Insert a storage device into either of the USB ports.

When connecting to a storage device through either of the USB ports, press the Source button and select USB 1 or USB 2 as input source. A connection is successfully established now.

Choose the type of multimedia you want to display (Movie/Photo/Music/Text) on the multimedia interface. Press Left/Right to choose your storage device. Press Up/Down/Left/Right to select the file showed on the screen, then press the Ok button to open this selected file. Press the Play/Pause button to play or stop the content.

Connecting to a SD Card When connecting to a SD card through SD card slot, press the Source button and select SD CARD as input source. A connection is successfully established now.

Choose the type of multimedia you want to display (Movie/Photo/Music/Text) on the multimedia interface. Press Left/Right to choose your storage device. Press Up/Down/Left/Right to select the file showed on the screen, then press the Ok button to open this selected file. Press the Play/Pause button to play or stop the

Connecting to an AV Equipment When connecting to an AV equipment through AV input port, press the Source

button and select AV as input source.

Connecting to a HDMI Device When connecting to a HDMI device through HDMI port, press the Source button and select HDMI as input source.

Connecting to a HDMI Device Connecting to a VGA Device Connecting to an Audio Device

Projector Cleaning and Maintenance Projector Cleaning Cleaning the Projector Case Cleaning the Lens Cleaning the Vents · · Projector Maintenance Batteries Replacement of the Remote Control

Technical Specifications

Troubleshooting

Remote Control 1. Power button (turns the projector on or off)

- 2. Mute button (turns off sound)
- 3. Previous button (selects previous program)
- 4. Next button (selects next program)
- 5. Rewind button (fast backward)
- 6. Fast forward button (fast forward)
- 7. Flip button (flips the image)
- 8. 16:9/4:3 button (selects an aspect ratio of the image)
- 9. P.mode button (selects Picture mode)
- 10. Return button (cancels/exits functions)
- 11. Source button (selects of the input source)
- 12. Play/Pause button (plays/stops playing audio or video)
- 15. Ok button (selects and confirms options)
- 16. Right (selects rightward movement on the function interface of the menu)
- 17. Down (selects downward movement on the function interface of the menu)
- 18. Menu button (accesses projector menu system)
- 19. Exit button (exits functions)
- 20. Numeric buttons (enter numbers) 21. Zoom button (zooms into and out of the image)
- 22. Playback button (plays back the video)

Connecting to a VGA Device When connecting to a VGA device through VGA port, press the Source button and select PC-RGB as input source.

Connecting to an Audio Device Connect the projector to an audio device through audio jack.

Note. Ensure the format of movie/priot						
projector.						
For supported	format details, ple	ase ch				
Chan						
Multimedia	Video File	MPG/A				

Multimedia	Video File	MPG/AV/TS/MOV/MKV/DAT/M
	Audio File	MP3/WMA/AAC/AC3/M4A
	Picture File	JPG/JPEG/BMP/GIF/PNG
	Text File	тхт

Projector Cleaning and Maintenance

For optimum watching experiences and longer lifetime, please clean the projector periodically. For projector maintenance, please seek help from or under the guidance of specified persons. If it is necessary to replace any parts of the projector, please feel free to contact the dealer or qualified customer service team. Before cleaning and maintaining the projector, please turn off the projector and unplug the power cord.

Projector Cleaning

system during working caused by dust, dirt and smudge. **Cleaning the Projector Case**

Use a piece of dry, soft and lint-free cloth to remove dust or dirt; Use a piece of moistened and soft cloth with a little water and mild soap to remove stubborn dirt.

Cleaning the Lens

remove dust or dirt; Gently wipe the lens by a piece of moistened (with a little water), non-abrasive and lint-free cloth to remove stubborn dirt.

·· 14 · 16

13. Up (selects upward movement on the function interface of the menu) 14. Left (selects leftward movement on the function interface of the menu)

Note: Ensure the format of movie/photo/music/text projected is supported by the

heck the table below. File Types Supported V/TS/MOV/MKV/DAT/MP4/VOB WMA/AAC/AC3/M4A PEG/BMP/GIF/PNG

Always keep the projector clean to avoid affecting images quality and ventilation

Gently wipe the lens with a piece of dry and non-abrasive cloth or paper to

Precautions for Use

Follow these safety instructions and read these helpful tips before setting up and using the projector.

Important Safety Instructions

•Do not disassemble the projector. If needed, please contact your dealer for repair/replacement. •Do not use the different power source, it may result in fire or electric shock.

Please use the indicated type of power source. Do not look into the lens when the projector is operating. The bright light may

damage your eyes. •Do not use the projector near water or sources of heat.

•Place the projector on an even surface or stable stand. If the projector is mounted on a ceiling, it should be installed by qualified mounting hardware which

designed for use with this projector. Unplug the projector after powering down.

•Do not bump, shake or drop the projector, it may cause damages or can even lead to a projector crash.

Helpful Tips

•For incredible clarity and optimum results, we strongly recommend that you operate the projector in a dark environment. •You may adjust the focus ring and keystone simultaneously until to get crystal


clear images. •Please understand that the projector makes noise for heat dissipation during working. Nevertheless, it will not affect watching experiences when connected to

an audio device. •RAGU Z720 projector is ideal for home entertainment, such as videos watching, photos viewing and games playing etc. Please be advised that the projector is not

suggested for data presentation in business. Maximum supported resolution of RAGU Z720 projector is 1920×1080 pixels with its native resolution of 1280×768 pixels.

•If there is no sound when playing videos, you may check whether these videos are equipped with Dolby technologies. The projector cannot support Dolby for the present, but you can connect RAGU Z720 projector to a computer/laptop for

videos watching instead. •The projector supports screen mirror with smartphone/tablet. The accessory you need to prepare is a HDMI/Wi-Fi dongle. The stability of mirror screen completely depends on the HDMI/Wi-Fi dongle. The USB port is designed for USB storage

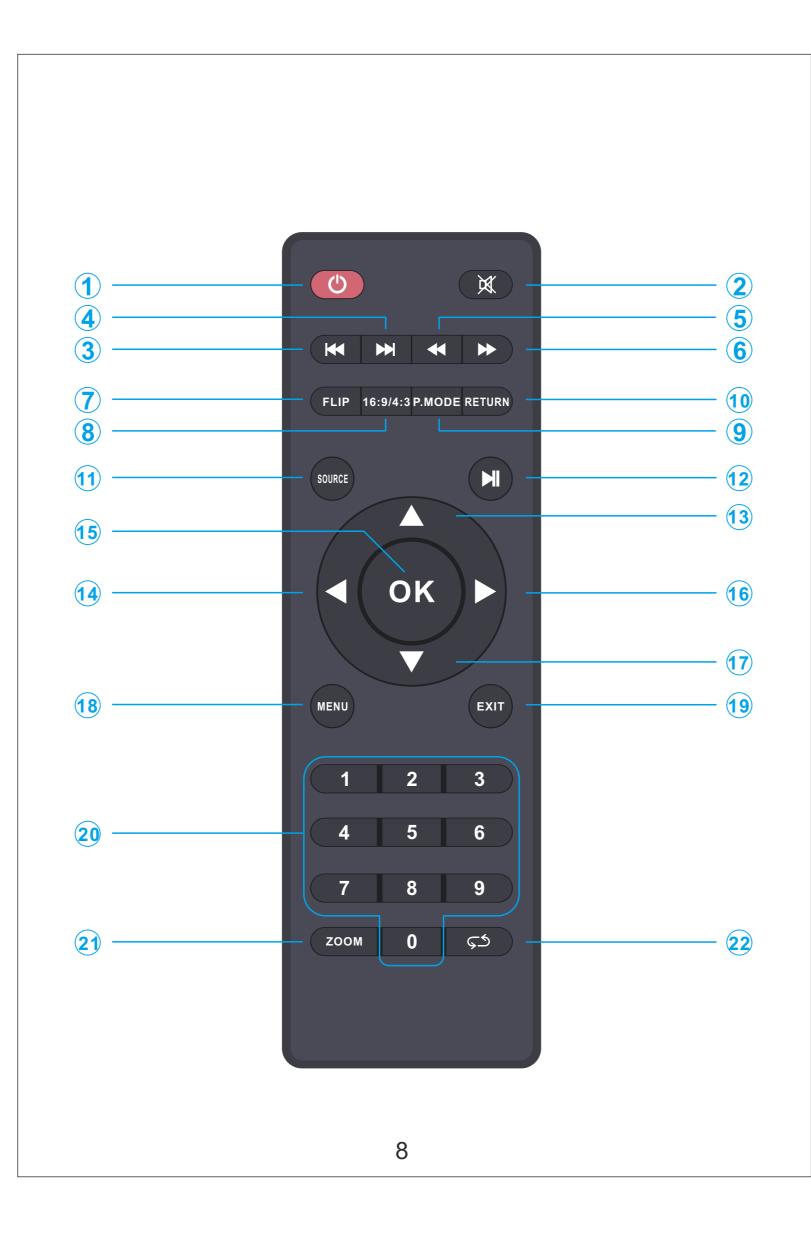

Cleaning the Vents Use a soft brush or a special designed small vacuum to remove the dust.

Note: For cleaning process, do Not spray any liquid (included water) directly on any parts of the projector. Do Not use the chemical liquid to clean the projector which will damage the projector.

Projector Maintenance

For this part, we only offer the basic maintaining suggestions. If you have any further requirements (replacement or repair), please contact the dealer or qualified customer service team.

Batteries Replacement of the Remote Control

If batteries have run out, please replace batteries by following steps: 1. Open battery cover of the remote control;

- 2. Insert batteries with the + and ends as the indicators on the battery box showed;
- 3. Close battery cover of the remote control properly.

Technical Specifications

To know product better and use projector properly, please read the table below:

Imaging Technology	LCD
Native Resolution	1280 x 768 pixels
Maximum Supported Resolution	1920 x 1080 pixels
Light	LED
Contrast Ratio	1000:1
Aspect Ratio	4:3/16:9
Speaker	Built-in 1 x 5W
Keystone Correction	± 12 ° Vertical
Screen Size	26-280 inches
Projection Distance	1-7 m
Recommended Projection Distance	2.5-5 m
Color	1.67 Million

suggestions in mind:

16:9 Aspect Ratio 1 2 3 4 5 Note: The table and measurements provided are for reference only.

Interface Consumption Power Supply Operating Temperature Storage Conditions Operating Humidity Supported Video Formats Supported Audio Formats Supported Image Formats Supported File Format Package Accessories Package Size Product Size Net Weight

device connection. It cannot connect to smartphone/tablet or charge smartphone/table •The projector can connect to Mac/Mac Pro, the only accessory you need to

Your projector comes with a free replacement or a full refund within 1 year that lets your product with confidence. However, this warranty does not cover the

•Purchases from unauthorized resellers

 Improperly operated devices •Purchases made over 1 year ago (unless you get extended warranty) Free products

Lost or stolen products

prepare is a HDMI adapter.

Warranty

following:

Projector Features

•Ultra clarity and brightness of the image with sharp edges

RAGU Z720 projector includes these special and outstanding features: Incredible watching experiences

•Native resolution of 1280×768 pixels •Maximum supported resolution of 1920×1080 pixels

Flexible connectivity Supported multimedia playing through VGA, HDMI and AV ports respectively Supported USB storage devices through 2 USB ports •Supported SD card through SD card slot

Easy-to-use setup and operation features

 User-friendly operating system Innovative keystone correction ring for flexible projector placement Longer lamp life up to 30,000 hours

Product Box Contents

Please save all the packaging in case you have further requirements (replacement or refund). Use the original packaging (or equivalent) when shipping. Ensure your projector box included all of these parts:

Setting Up the Projector

Before projecting, please be familiar with the following suggestions of placement, installation and adjustment.

Projector Placement and Installation You can place or install your projector in the following ways:

Front/Rear: Place the projector on flat and sturdy surface in front of you or behind

Front Ceiling/Rear Ceiling: Install projector in a qualified ceiling mount with a

Whether the way you choose to project your images or videos, please keep these 1. Ensure the place you set the projector is sturdy and even;

2. Do not block the vents and always leave enough space for heat dissipation; 3. If the way you project is from the ceiling or from the rear, please ensure to select the correct projection option in the menu system.

Projection Distance and Screen Size

The throw distance, zoom factor, aspect ratio, and other settings determine the approximate size of the image. Please refer to the following table for the relationship between projection distance and image size.

Projection Distance	Screen or Image Size
(Unit: m)	(Unit: in)
1.5	51
2.0	70
2.5	90
3.0	110
4.0	145

1 x AC Input 2 x USB Ports 1 x SD Card Slot 1 x VGA Port 1 x AV Input 1 x HDMI Port 1 x Audio Jack 140-150W AC110-240V 50-60Hz +5℃~+35℃ Temperature (-10[°]C~+60[°]C); Humidity (10%~90%) 10%-70%(Non-condensing) MPG/AV/TS/MOV/MKV/DAT/MP4/VOB MP3/WMA/AAC/AC3/M4A JPG/JPEG/BMP/GIF/PNG Instruction Manual, Remote Control Power Cord, 3-in-1 AV Cable, Adjustable foot(already installed), HDMI Cable, VGA Cable, Cleaning Cloth 38cm x 25cm x 14cm 31cm x 22.5cm x 10.5cm 2.48kg

Projector Adjustment

Except setting suitable throw distance, you can adjust keystone ring and focus/zoom ring manually before projecting your images or videos:

1. Rotate the focus ring to adjust the clarity of the projected image until it reaches to crystal clear;

2. Adjust the keystone ring to correct keystone distortion.

Basic Projector Operations

Basic operations provided help you to get started quickly.

PowerOn/Off the Projector

Power On the Projector Plug in the power cord, then press the Power button on the top of RAGU Z720 or on the remote control, the projector will turn on.

Power Off the Projector Press the Power button on the top of RAGU Z720 or on the remote control, "Power to standby, Else to cancel" will be showed on the screen. Press the Power

button again to turn off the projector.

on the remote control or on the control panel.

Projector Menu Settings Press the Menu button on the control panel or on the remote control to access to the menu interface. The menu interface allows you to set PICTURE, SOUND, TIME and OPTION. Choose the feature you want to set by pressing the Left/Right button

For detailed settings, press UP/Down to view options listed under PICTURE, SOUND, TIME and OPTION. Then press the Ok button to select options. (Some of these options have a submenu, press the Menu button to exit a submenu.)

Troubleshooting

As a high-tech product, the projector combined with optical, mechanical and electronic components and equipped with a protective and complicated circuit inside. To quickly solve your problems and to prevent improper using and settings, please follow operations below. If your problems or enquiries cannot be eliminated after reading the table, please contact us without any hesitation.

Problem Description	Troubleshooting
The projector won't turn on	Check if the power source is the indicated one and the power cord is connected correctly. Make sure the power cord is not defective.
Lamp does not work after turning on the projector	Ensure power cord and power source are connected correctly. If the lamp gets damages or the service time of the lamp is more than 30,000 hours, please contact us to replace the lamp.
No images	Check whether the format and resolution of images are supported by the projector.
No response from remote control	Check whether batteries of the remote control run out or are installed correctly. Make sure there is no obstacle between the remote control and IR receiver. Always use the remote control within its effective distance (5m).
Obscure/blurred images	Please rotate the focus ring, adjust the keystone and throw distance until the projected image is clear. Ensure the lens is clean.

1